


24005

500 lbs Weight Carrying

*For Technical Service Call 1-800-336-4271 Extension 126

INSTALLATION INSTRUCTIONS:

1. Remove stabilizer bar by removing the two bolts from each side allowing stabilizer to swing freely.
2. Raise stabilizer bar and hitch into position making sure hitch is between the stabilizer and frame, fasten bolts,
3. Torque all bolts to 75 ft. lbs. Torque all 8m bolts to 20 ft. lbs.

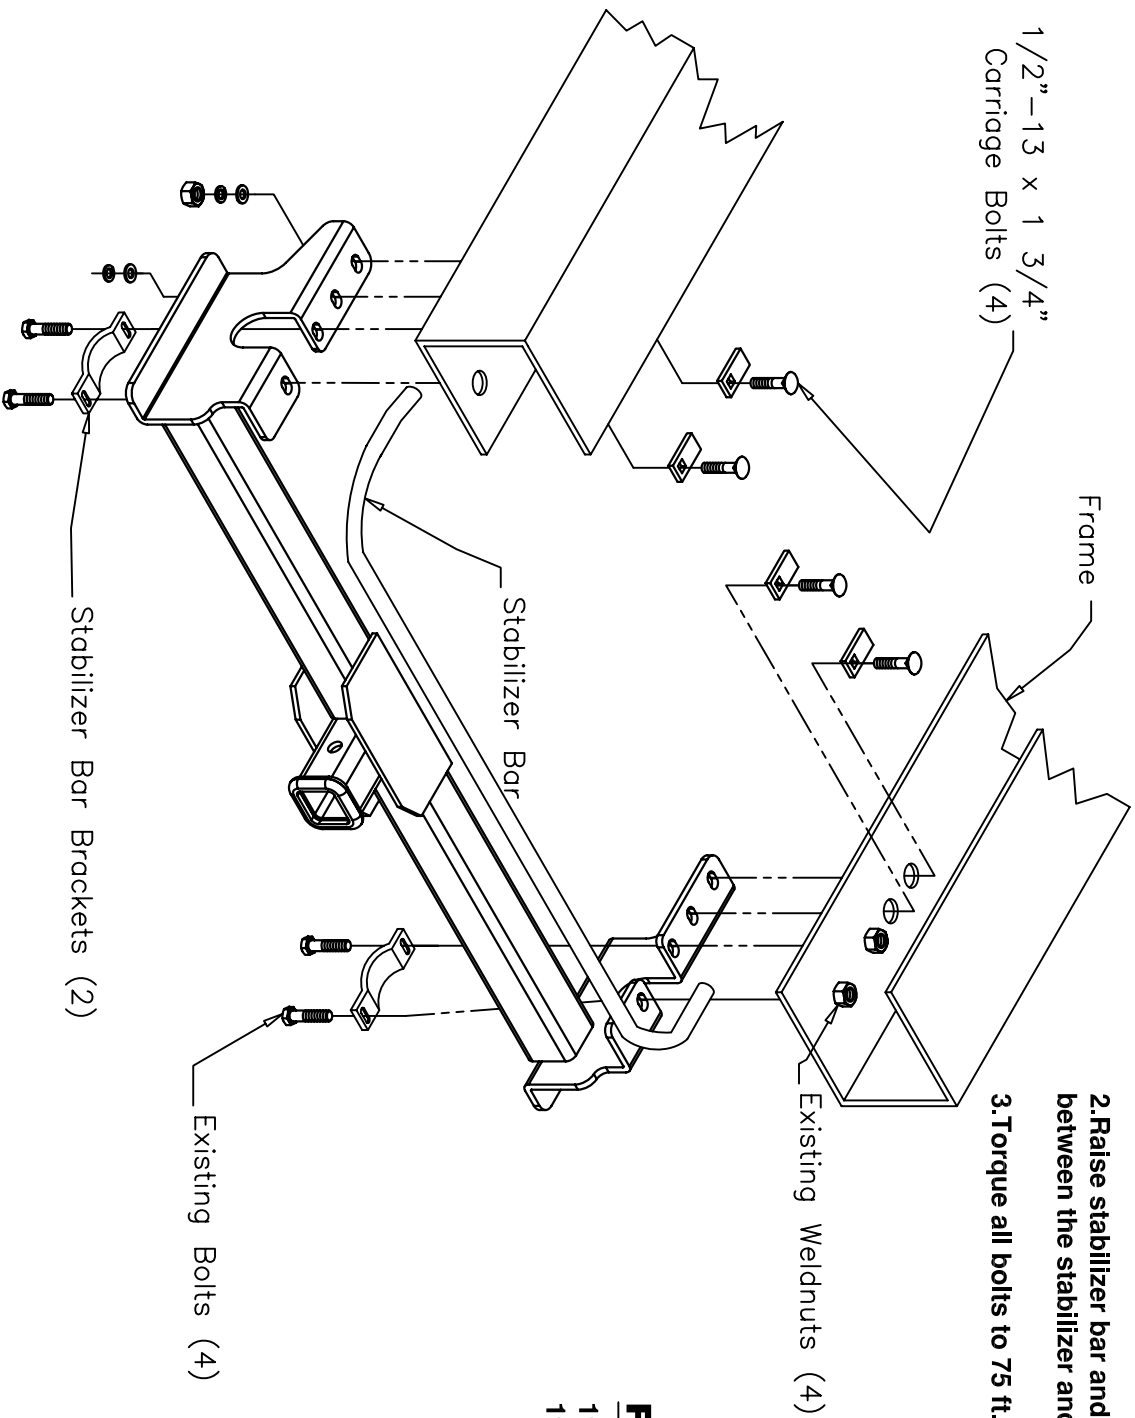

FIT LIST:

1992-1997 Ford F-250 HD (2 WD Diesel)
1992-1997 Ford F-350 HD (2 WD Diesel)

HARDWARE LIST:

4-1/2"-13 x 1 3/4" Carriage Bolts
4-1/2" Flat Washers
4-1/2" Lock Washers
4-1/2"-13 Nuts
4-1/4" x 1" x 2 1/2" Carriage Spacer

****WARNING:** Although this hitch is designed to safely carry the loads specified, under no circumstances do we recommend exceeding the towing capabilities. Always use safety chains and travel at a safe speed.

